




Important Safety Instructions:

Failure to follow these operating instructions may cause this stage to become unstable, fall over and cause serious injury or death.


HOW TO UNFOLD YOUR STAGE

1.

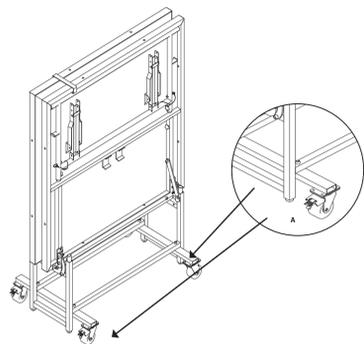


1. Roll the stage to the location you would like to set it up. Engage breaks on both casters by pressing brake lever A down with your foot, so that the stage cannot move

2.

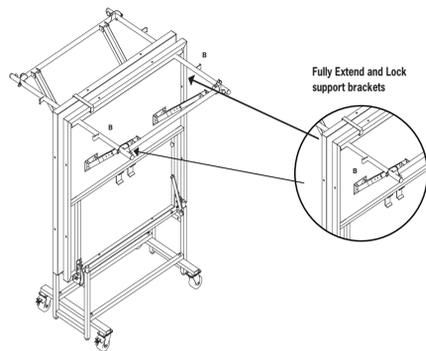


2. Unfold legs on both stage half platforms. Make sure the leg's support brackets are fully extended and locked

3.

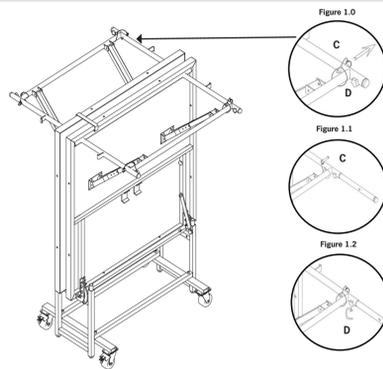


3. If you have a 32" high stage please extend the legs as follows:
 -Remove safety pin C (Figure 1.0)
 -Loosen leg side knob D (Figure 1.0)
 -Pull out leg extension until you see the next hole in the leg (Figure 1.1)
 -Insert safety pin C into this hole (Figure 1.1)
 -Tighten the leg knob D (Figure 1.2)
 -Repeat the same procedure to adjust all 4 legs

4.

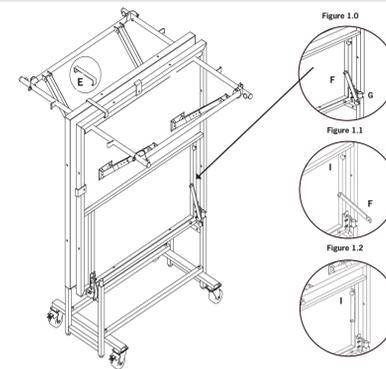

4. Remove safety bracket E from the top of the stage
 5. Loosen Knob G. Reposition safety bar F by moving it upwards and connecting it to knob I (See Figure 1.0 to 1.2)


5.

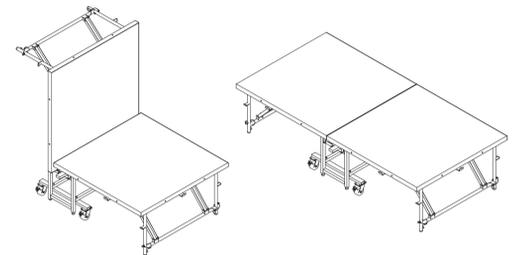

6. Unfold first half of stage
 7. Repeat part 5 on other side and unfold the second half of the stage platform
 8. Your stage is now ready


HOW TO FOLD UP YOUR STAGE

1.

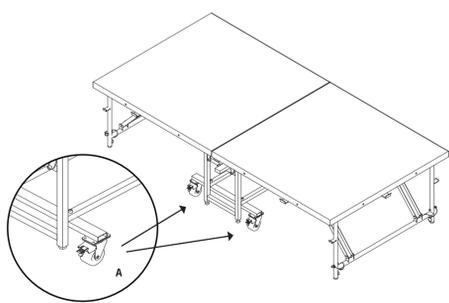


1. Engage breaks on both casters by pressing brake lever A down with your foot, so that the stage cannot move
 2. Fold-up first half of the stage platform

2.

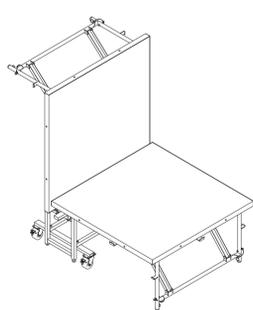


3. Loosen knob I and reposition safety bar F by moving it downward and connecting it to knob G. Tighten knob G (see Figure 1.0 to 1.2)
 4. Fold-up the second half of the stage and repeat step 3
 5. Engage safety bracket E by securing it to the top of the stage

3.

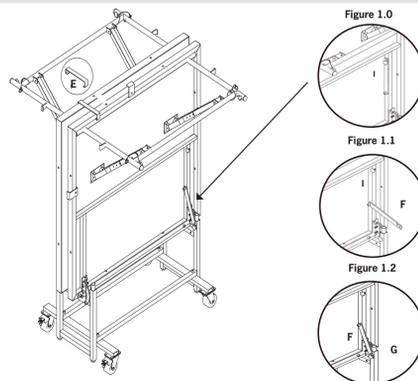

6. If your legs are extended, please adjust them to reduce their length as follows:
 -Remove safety pin C (Figure 1.0)
 -Loosen leg side knob D (Figure 1.0)
 -Push in leg extension until you see the next hole in the leg
 -Insert safety pin C into this hole (Figure 1.1)
 -Tighten the leg knob D (Figure 1.2)
 -Repeat the same procedure to adjust all 4 legs

4.

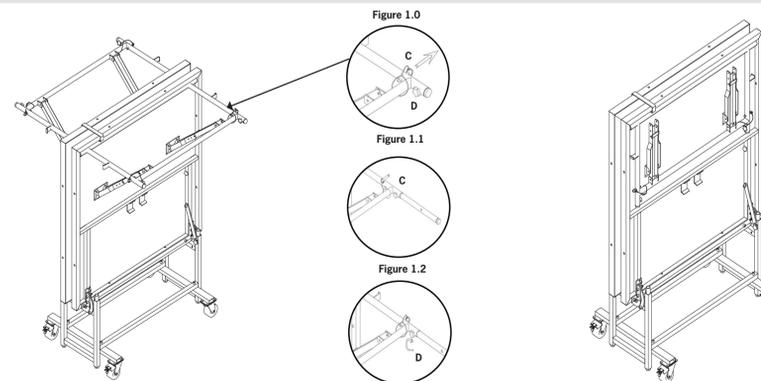

7. Fold down legs on both sides of the stage. Your stage is now ready for storage. You can roll the stage to your desired storage location. Once it is at your desired location engage the breaks on the casters with your foot, so the stage stays stationary

For more information go to: s101.intellistage.com/